
















LED driver remote controller instructions

After led driver power on, use the infrared sensor on remote controller closed to the big hole on DC side.



Firstly press  to unlock, within 10s, press fuction key to adjust your required output current

- | | | | |
|---|-------------------------------|---|-----------------------------|
|  | Key for output current up |  | Key for output current down |
|  | key fro output current max |  | key for adjust range 90% |
|  | key for adjust range 80% |  | key for adjust range 70% |
|  | key for adjust range 60% |  | key for adjust range 50% |
|  | key for adjust range 40% |  | key for adjust range 30% |
|  | key for adjust range 20% |  | key for adjust range 10% |
|  | Key for reserved, no fuctions |  | Key for output current min |



Warning: Please do not continuously press "+" to avoid the over power protection and unstable output.